


Phono advanced menu


In the Configurator, bind a button on the remote to RAM / SUBSONIC :

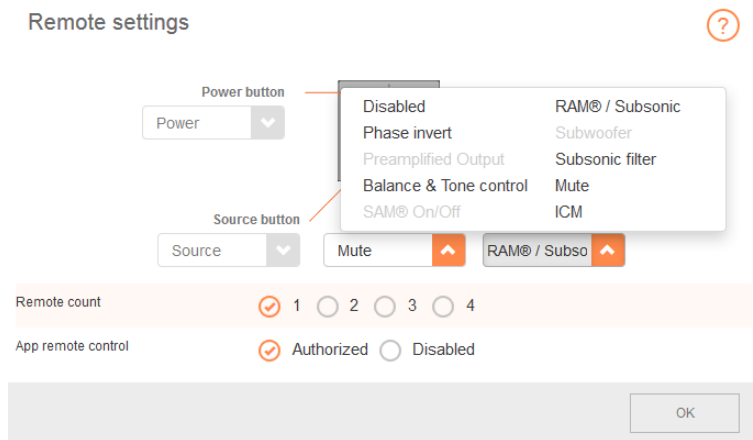

On the phono input, make a short press on the appropriate button RAM / SUBSONIC



The next menu appears:

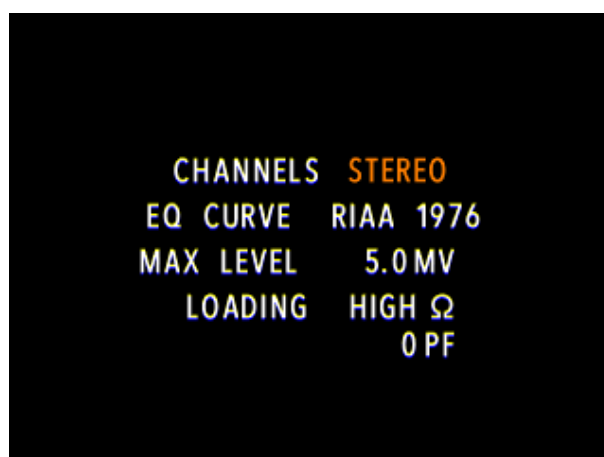

To navigate through the settings, make a short press, adjustments are made using the jog dial.

The settings are applied after 2 seconds of inactivity of the jog dial. (Except for channels and max level).

To exit, make a long press.

